


The correct method of installing livestock ear tags


1. Requirements:

- Trained manpower: at least two people
- Equipment: work clothes, gloves, desk, disinfectant spray or alcohol, clipper, stapler, livestock restraint device (nose clip or metal restraint)


2. The ear tag consists of two parts, male and female

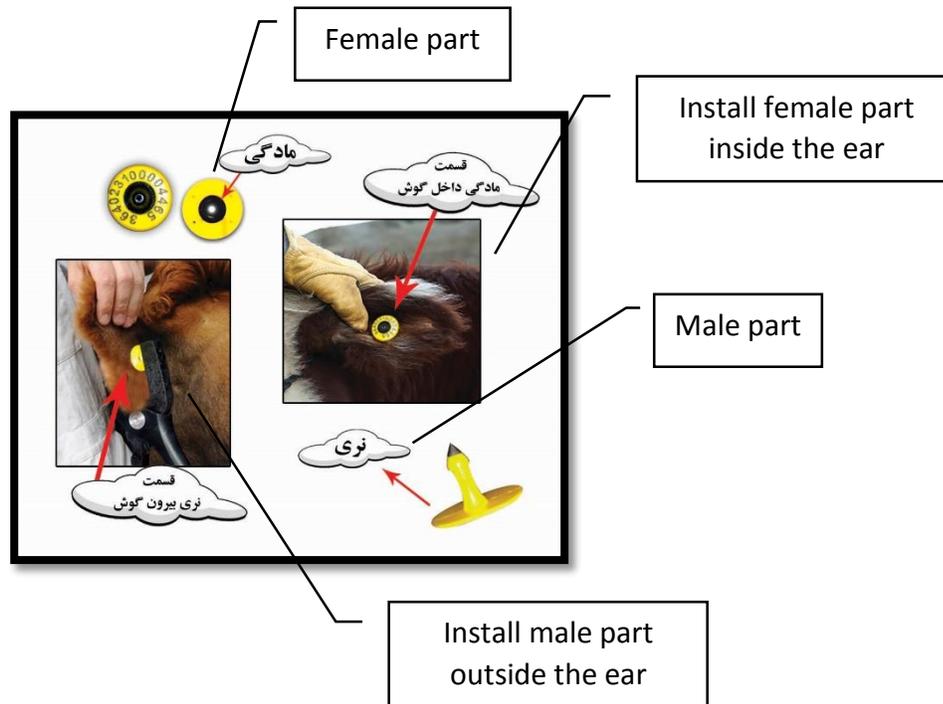


3. Due to the installation of a similar number on both ears, before installing the tags, arrange the same numbers.

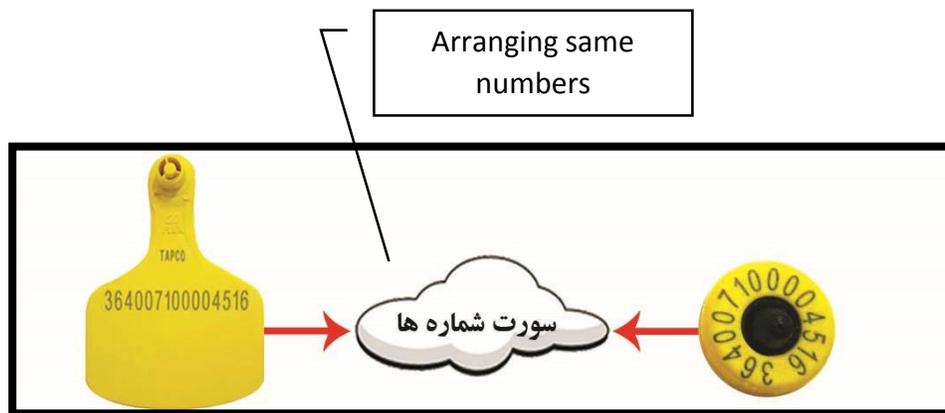

4. While installing the tag, the head of the animal must be completely restrained because during the installation, the animal makes unpredictable and intense movements.

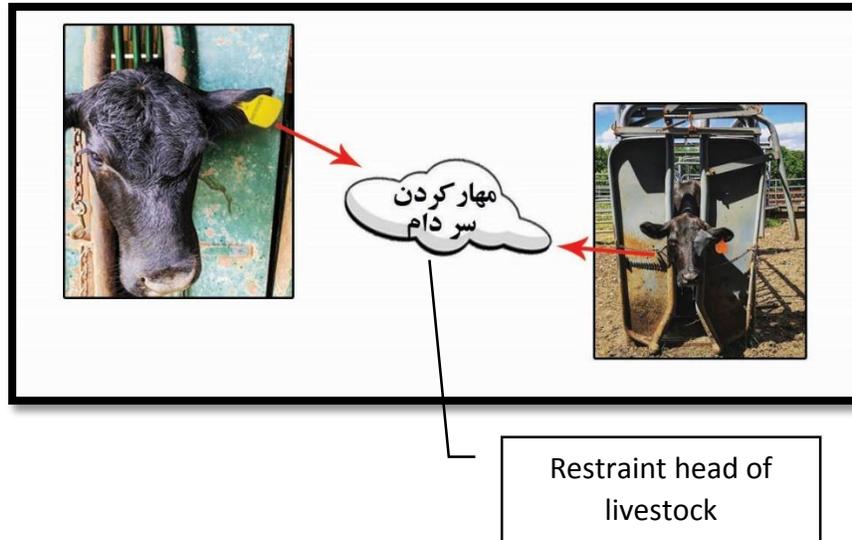


5. When tag is installed, an alcohol solution should be used to disinfect instruments and tags. Alcohol spray is recommended for this purpose.
6. The ear tag should be installed between the two vessels according to the photo below. Installing it in the area of the vessel causes bleeding, infection and dilation of the ear canal and in the long time causes tag to fall.

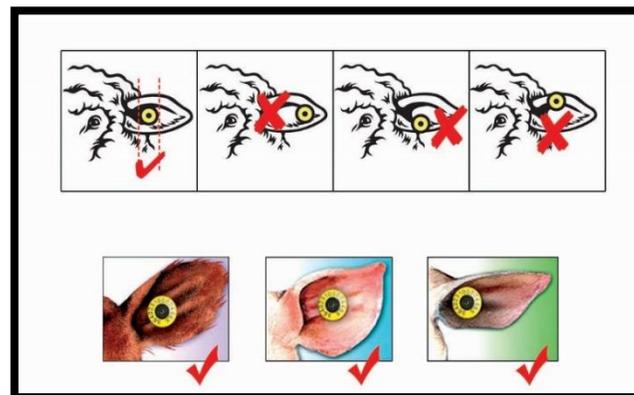

7. Insert the female and male parts into the stapler.




8. Make sure the male part of the tag with the female hole is exactly in line. Be careful not to get the male into the female during this test.

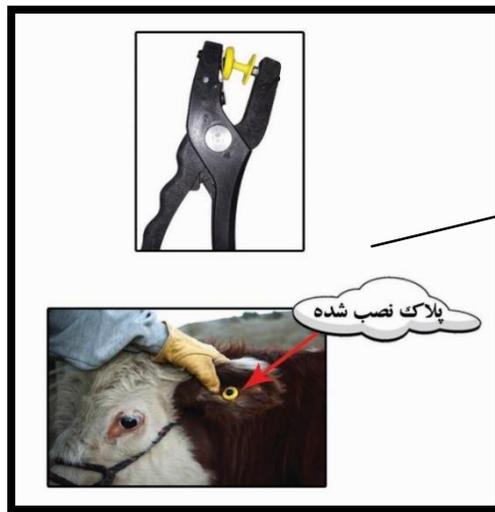

Installed ear tag


9. In different types of tags, the brake (Stop) under the punch should be adjusted so that no excessive male enters the female part (does not pierce the female end). For adjustment, use the appropriate allen screw and 4mm allen wrench.

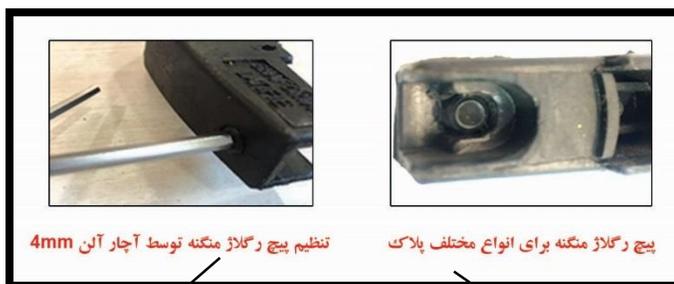

Adjusting of stapler
with allen wrench

Adjustment screw
for diverse tags

10. After installing each ear tag, check the correctness of the installation from various aspects.

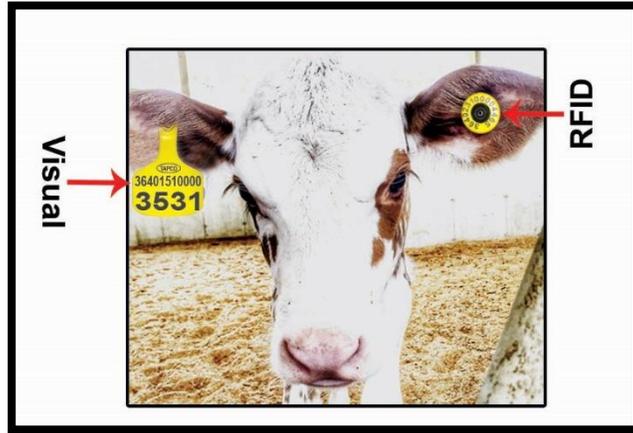

11. If there are any problems with the installing tag, it should be removed with a suitable clipper and the tag should be installed correctly. The removed tag must be handed over to the responsible to delete the number from the database.